UP-AC-2700

Outdoor enclosure air conditioner



2 700 W

Cooling capacity at L35/L35

230 V | 50/60 Hz

Electrical supply

Wall-mounted outdoor unit

Cooling and electrical data

Cooling capacity (L35/L35)	**2700 W**
Power input (L35/L35)	**1250 W**
Supply voltage / rated frequency	**230 V / 50/60 Hz**
Running current	**5.7 A**
Starting current	**6.2 A**
Refrigerant / charge	**R134a / 670 g**
Airflow, external / internal	**1175 / 945 m³/h**
Default thermostat setting / hysteresis	**34 °C / 4 °C**

Construction and operating conditions


Dimensions, H × W × D	**1150 × 400 × 295 mm**
Weight	**53 kg**
Mounting / corrosion protection	**Wall mount / galvanized**
Protection, external / internal	**IP55 / IP65**
Ambient air temperature	**0 to +55 °C**
Compressor / fans	**Danfoss-Secop / ebm-papst**
Communication options	**EtherNet/IP, Modbus TCP or RTU**

L35/L35 gives the rated output at 35 °C inside the enclosure and 35 °C ambient.

Dimensions and service access

UP-AC-2700 | Wall mounting


Unit dimensions and mounting cut-out

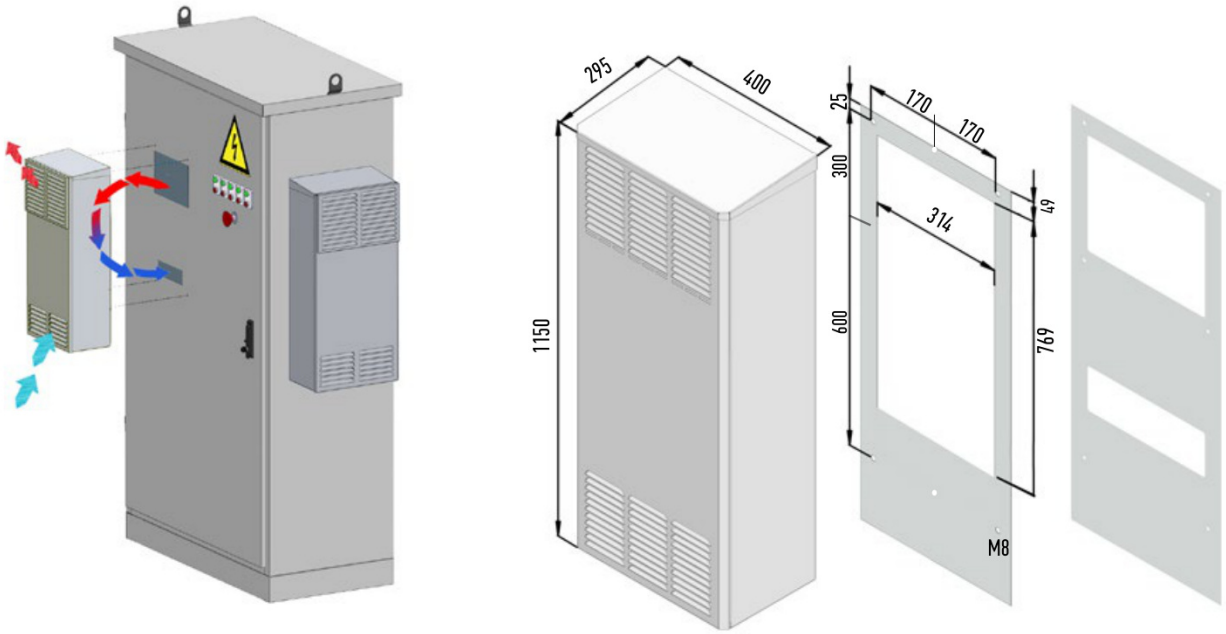

Overall dimensions (H × W × D)	**1150 × 400 × 295 mm**

Dimensions in millimetres. Use the model-specific drawing to locate the panel openings.

Service components

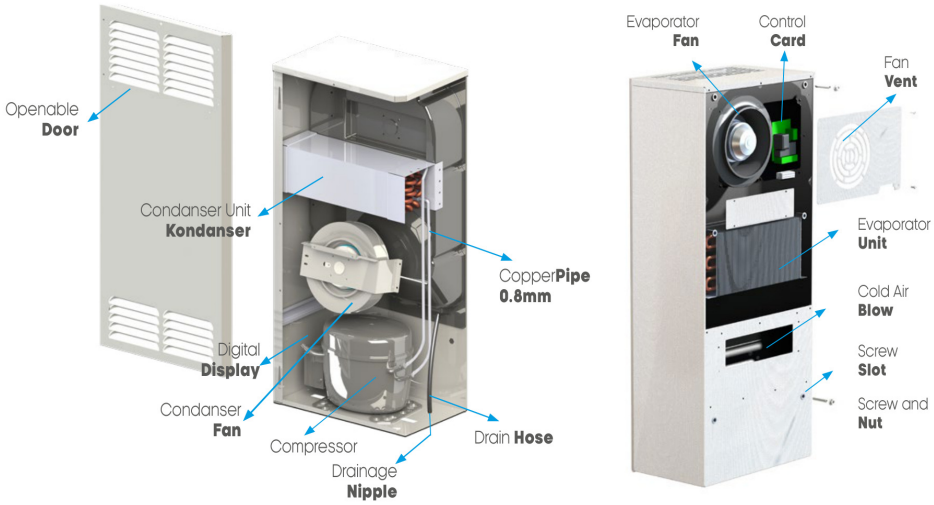

Series service view. Component positions can vary by unit size.

Controls and installation

UP-AC-2700 | Interfaces and panel mounting

Electronic control



Cabinet temperature display



Ethernet interface

The digital controller displays cabinet temperature and provides local setpoint adjustment. Ethernet and RS-485 support remote monitoring. A dry contact transmits fault status, and the controller accepts a door-switch input.


Panel installation sequence



1 Position the template



2 Cut the panel

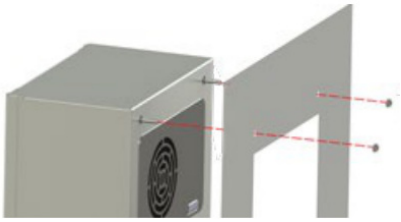

3 Secure the unit

Check the cut-out and mounting points against the dimensional drawing on page 2.

Use the wiring diagram supplied with the unit and verify its rated supply before connection.

Electrical supply	**230 V / 50/60 Hz**